


# PVX Multimount®

Installation manual pitched roof

Article number: PVX16032021

## Included

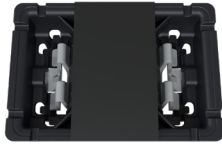


### Step 1




PVX Minimount PVX16032021 Ø6,3mm  
36 x PVX Minimount  
36 x Mesh tray clip

### Step 2

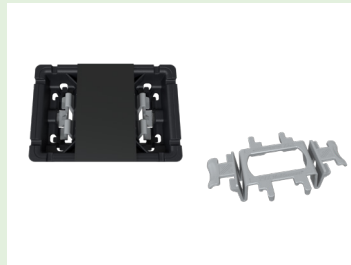

PVX Minimount bottom, EPDM rubber,  
mesh tray clip

### Step 3

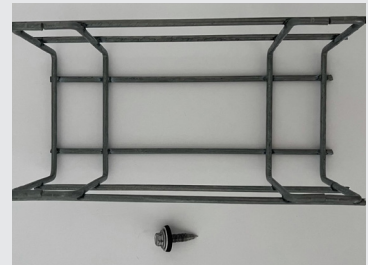

Required: screw + metal washer  
including EPDM, bolt, mesh tray  
60 – 200mm wide

### Step 4




Install the PVX Minimount with the  
screw, metal washer + EPDM on the  
substrate with a maximum tightening  
torque of: 4NM.

### Step 5



Tilt the mesh tray and place it in the  
PVX Minimount. The multilock system  
allows the wire tray to hang securely for  
hands-free assembly.

### Step 6

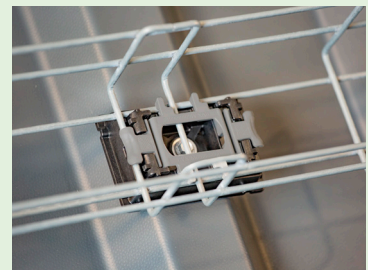

Place the mesh tray clip and push it on:  
Click!

