

PVX Multimount®

Wall installation guide

Article number: PVX16032021

Included



Step 1




PVX Minimount PVX16032021 Ø6,3mm
36 x PVX Minimount
36 x Mesh tray clip

Step 2



PVX Minimount bottom, EPDM rubber,
Mesh tray clip

Step 3

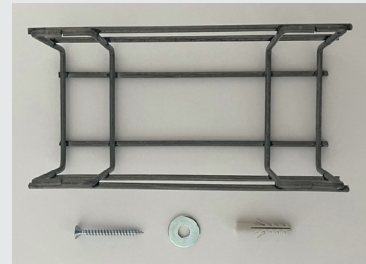

Required: screw + metal washer
including EPDM, bolt, mesh tray
60 – 200mm wide

Step 4




Install the PVX Minimount to the wall
with a screw + metal washer with a
maximum tightening torque of: 4NM.

Step 5



Tilt the mesh tray and place it in the
PVX Minimount. The multilock system
allows the wire tray to hang securely for
hands-free assembly.

Step 6

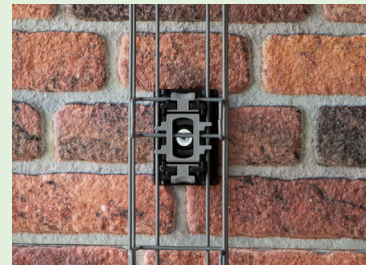

Place the mesh tray clip and push it on:
Click!